



YE39 (M.W.H) E.F.I RELAY B/W(152) O/Y (479) P/B (39) ENGINE 12V BUS (1040)	YE49 (M.W.H) START RELAY GY(434) R(2) R/W(806) V/W(6)	YE110 (M.W.H) ENGINE CONNECTOR 1 BLU/W(304) O/W(1426) Y(1049) P/BLU(339) G/W(465) B/W(1427) V/W(123)	YE111 (M.W.H) ENGINE CONNECTOR 2 R(481) LG(482) G(59) LG/B(366) GY(434) G(129) W/B(451) P(439)	
YE112 (M.W.H) ENGINE CONNECTOR 3 BR/BLU(42) R/B(1221) LBU(411) S/C ONLY O/B (740) LG(24) BLU(774) BR/R(121) P/B (39)	YE114 (M.W.H) LOCATION E3 EARTH CONNECTOR B/G(151) B/R(157) B/W(152) B(150) B/Y(155) B/R(157)	YB20 (POWER TRAIN HARNESS) PRNDL SWITCH Y(772) GY(773) W(776) BLU/W(771)	YB30 (M.W.H) AUTO TRANS SELECTOR HARNESS BLU(774) GY(8) R/W(1429) B/G(151) BR/W(19)	
YB34 (AUTO TRANS SELECTOR HARNESS) POWER & ECONOMY SHIFT SWITCH GY(8) BR/W(19) BLU(774) B/G(151)	YB35 (POWER TRAIN HARNESS) NEUTRAL START & BACK UP SWITCH BR/BLU(42) B/R(750) GY/BLU(1434) LG(24) GY(434)	YB44 (M.W.H) IGNITION SWITCH V(5) R(2) P(3) BR(4)	YB66 (M.W.H) INSTRUMENTS B/Y(155) GY(8) BR/W(19) BLU/Y(10) LBLU(14) G(875) V/R(234) W(85) BLU(15) O/Y(1340) P/BLU(44) BR/R(121) V/W(123) T(30) BR/O(33) Y/R(88) S/W(1220)	
YB129 (POWER TRAIN HARNESS) TRANSMISSION CONNECTOR GY/BLU(1229) R(1228) Y/B(1223) LG(1222) P/BLU(339) B/Y(1227) G/W(897) Y(1225) GY(1226) BR/Y(1224) BR(418)	YB132 (POWER TRAIN HARNESS) MANUAL TRANS SPEED SENDER T(832) BLU/W(831)	YB193 (POWER TRAIN HARNESS) P.C.M CONNECTOR 1 B/R(453) V(430) GY(1412) GY/B(1413) V(412) V/B(413) BR(418) G/W(897) W/R(815) O/W(1426) BR(832) (MAN) T(832) (AUTO) LBLU/B(647) B(630) BR/W(792) GY/R(422) LG(1222) Y/B(1223) G/Y(428) V/W(123) BLU/W(831) (AUTO) BLU(831) (MAN)		
YB175 (M.W.H) B.C.M CONNECTOR 3 LBLU(161) W/BLU(494) Y/R(143) Y(43) O/BLU(640) GY/R(1391) P/B(39) B(1150) BLU/W(97) GY(83) LBLU(94) O/W(840) Y/B(260) B/R(1144) W(160) GY/B(96) B/Y(556) G/W(1220) R/B(1221) V/R(229) BR/G(271) Y(266) G/W(1220) Y/B(272) W(717) W/R(308)				
YB188 (POWER TRAIN HARNESS) P.C.M 2 CONNECTOR O(740) V/W(415) LG(1456) BLU(417) R(481) GY(416) G/W(465) O/B(740) GY(416) G/W(465) P(39) R/B(1221) B/R(750) B/R(750) T(832)				YB195 (POWER TRAIN HARNESS) AUTO TRANSMISSION SPEED SENDER BLU/W(831) T(832)
YB194 (POWER TRAIN HARNESS) P.C.M CONNECTOR 3 BR/Y(1224) Y(1225) GY(1226) BLU(774) W/B(451) W(776) B(469) F16 E16 B/Y(452) R(1228) GY/BLU(1229) BLU(31) V(435) P(439) GY(773) BLU/W(771) LBLU(411) B/W(1427) BLU/W(304) GY/BLU(1434) AUTO LG/B(366) Y(846) BLU(841) BR/Y(844) B/O(429) V(843) G(842) GY(845)				

WIRING DIAGRAMS

HARNESS SYMBOLS: (M.W.H.) (BAT.) (E.) (P.T.) (B.)

